

## **HOW TO CARE FOR YOUR SIMMONS SPOTTING SCOPE:**

When not in use, store your spotting scope, with the protective caps on, in a moisture free environment. Avoid touching the lenses as the oils and salts on your hand will smear them, making clear focusing impossible and the salts will destroy the coating.

To clean the lenses, use a soft bristle brush to whisk loose dust and dirt particles away. Finalize cleaning by using a soft cloth ( a well laundered handkerchief will do), moistened with alcohol. Wipe lenses from center, outward.

To clean metal parts use a semi-stiff bristle brush to remove loose dirt and dust. Follow with a damp cloth. To restore luster wipe with a silicone cloth. Do not allow silicone to get onto lenses as it has the same effect as body oils and salts, but much harder to remove.

# **SPOTTING SCOPE INSTRUCTIONS**

# **SIMMONS®**

# **SIMMONS®**

PRINTED IN TAIWAN

SOC-420

**CAUTION**  
Do not view the sun with  
this instrument as permanent  
eye damage may result.

POWER RING (ZOOM MODELS ONLY)

FOCUSING RING


## SET UP AND MOUNTING:

Spread tripod legs fully and set tripod on level surface.

Grasp pan head lever and rotate upward to place pan head in horizontal position. Rotate lever clockwise to lock pan head.

Position spotting scope with the mounting shoe aligned with the 1/4 x 20 mounting screw in pan head. Tighten mounting screw by turning counter clockwise.

Remove dust caps. To remove ocular (eyepiece) cap, turn counter clockwise. Pull objective cap to remove.

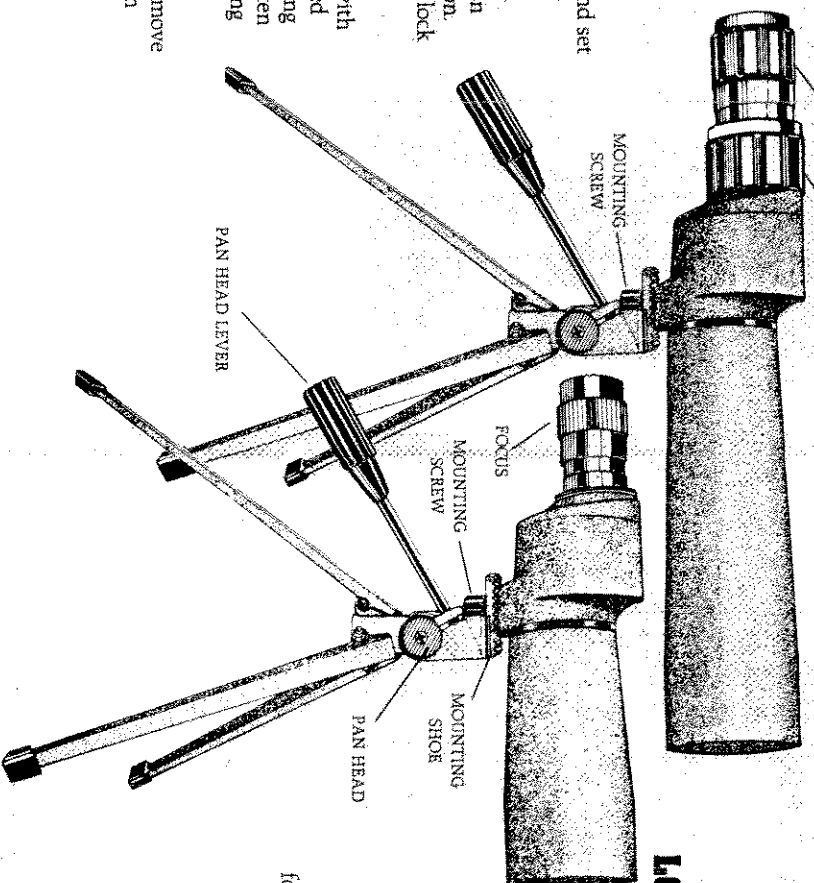

## LOCATING OBJECTS AND FOCUSING:

Loosen pan head lever (turn counter clockwise) and turn scope in the direction of the object to be viewed. When scope is aligned with the target object, tighten pan head lever.

On zoom models, turn power ring to lowest setting.

Look into eyepiece and rotate focusing ring (either direction) to focus object clearly.

On zoom models, rotate power ring to desired power setting. Refine focus as needed.